


Instructions Manual


Product Details:

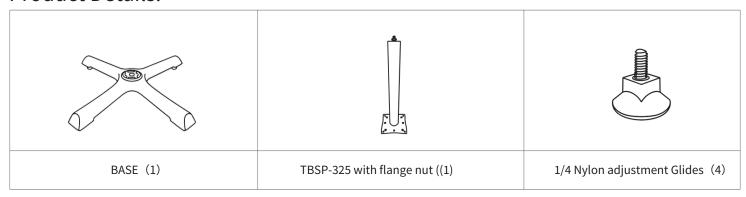

Distribution steps:




Move the welded TBSP-325 with top disc facing down (Side A). Remove the flange nut.

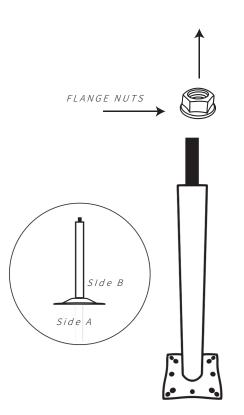



Position the cast base onto the rods and fasten it by tightening the flange nuts securely.

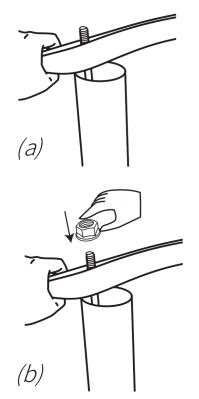



Attach the glide pads to the base in the correct positions. Once secured, flip the unit over and place it in position.

